

**Step 1:** Locate position on upper fuselage tube that will allow full and clear travel of all controls and will provide generous head clearance


**Step 2:** Ensure Strip of rubber is securely adhered to inside of one clamp half where it will contact fuselage tube.

**Step 3:** Place hex nuts into recess of upper clamp half.

**Step 4:** Assemble upper and lower clamp halves onto tube with hook axle in place

**Step 5:** Install two socket head cap screws loosely

**Step 6:** Finalize position and orientation before tightening screws

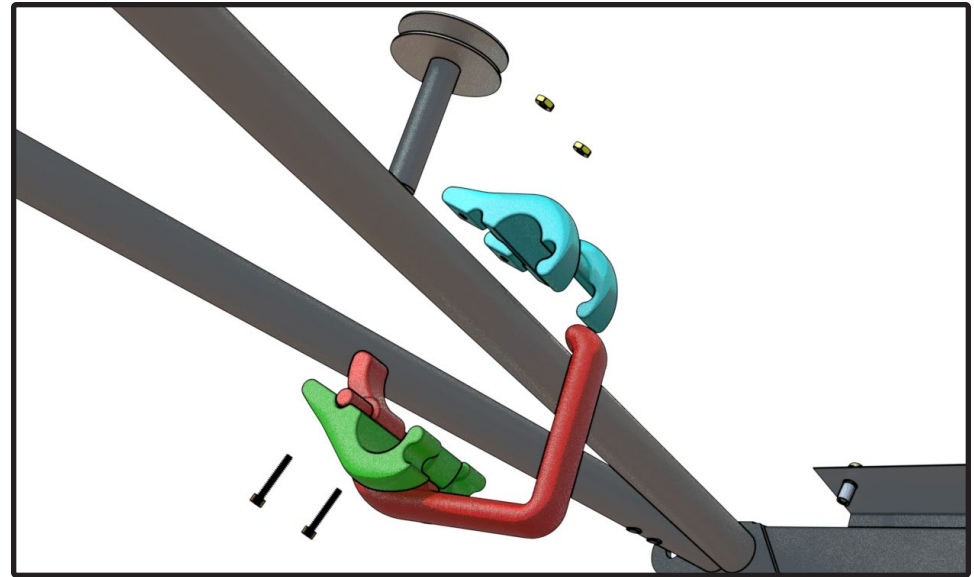

CUBCRAFTERS

